


# Schemat rozdzielni w pom. 010C

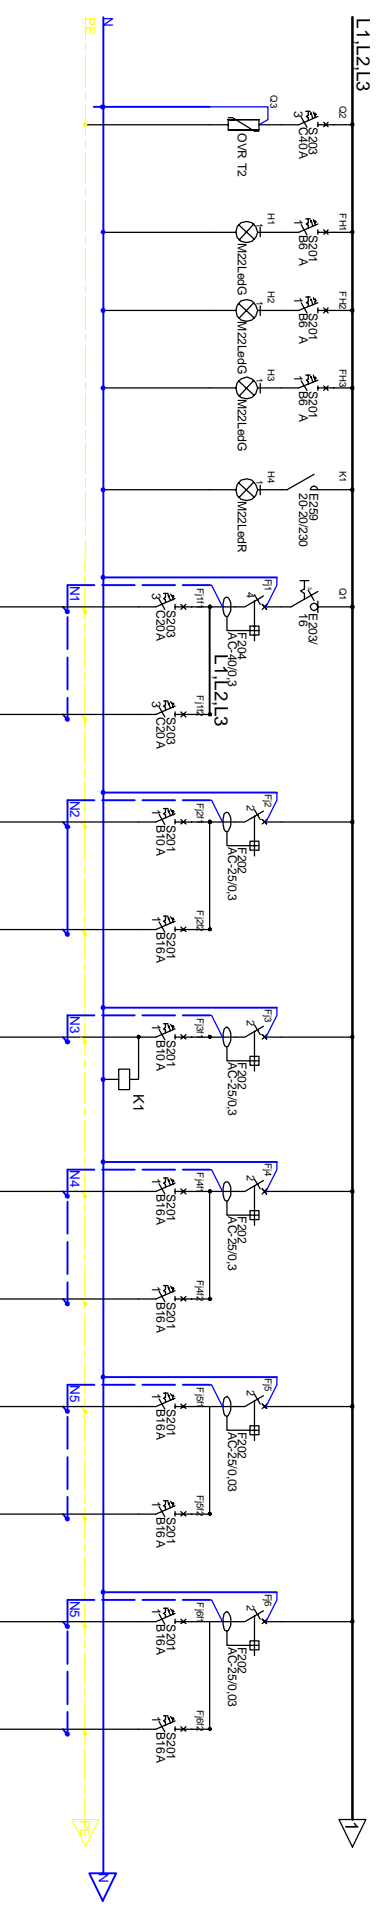

NR	01	02	03	04	05	06	07	08	09	10	11	12	13	14
Prad [A]	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Moc [kW]	-	-	-	4	2	0,4	1,5	0,2	1,5	0,9	1,5	1,5	1,5	1,5
Przewod	-	-	-	YDY20 <sup>2</sup> 5x2,5mm <sup>2</sup>	YDY20 <sup>2</sup> 5x2,5mm <sup>2</sup>	YDY20 <sup>2</sup> 3x1,5mm <sup>2</sup>	YDY20 <sup>2</sup> 3x2,5mm <sup>2</sup>	YDY20 <sup>2</sup> 3x2,5mm <sup>2</sup>	YDY20 <sup>2</sup> 3x2,5mm <sup>2</sup>	YDY20 <sup>2</sup> 3x2,5mm <sup>2</sup>	YDY20 <sup>2</sup> 3x2,5mm <sup>2</sup>	YDY20 <sup>2</sup> 3x2,5mm <sup>2</sup>	YDY20 <sup>2</sup> 3x2,5mm <sup>2</sup>	YDY20 <sup>2</sup> 3x2,5mm <sup>2</sup>
Odbior	-	Kontrola Faz	Awaria zasil. pompy wody	Gniazdo Silowe	Gniazdo Silowe	Oswietlenie	Klimatyzator	Pompa Wody	Gniazdo Wtyczkowe Komp. Obw1	Gniazdo Wtyczkowe Komp. Obw2	Gniazdo Wtyczkowe Obw 1	Gniazdo Wtyczkowe Obw 2	Gniazdo Wtyczkowe Obw 3	Gniazdo Wtyczkowe Obw 4